LAVATHERM 57800

Condensation dryer

User information

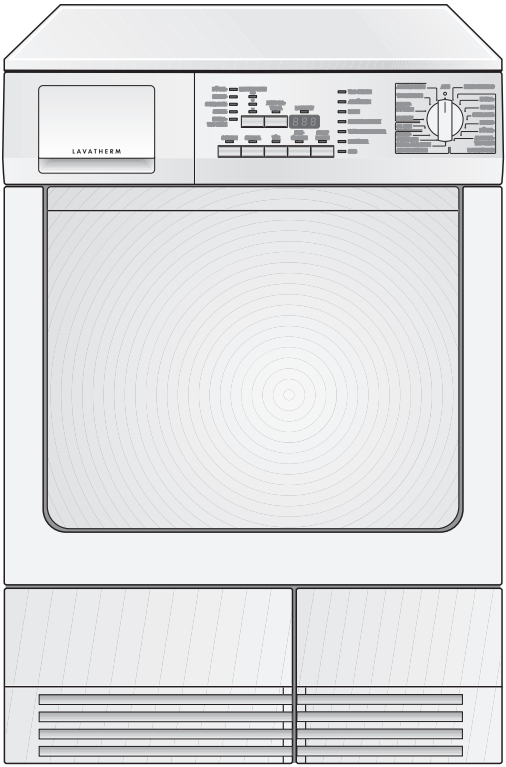

Dear customer,

Please read this User Information carefully and keep it to refer to at a later date.
Pass this User Information on to any subsequent owner of the appliance.

The following symbols are used in the text:

Safety instructions
Warning: Notes that concern your personal safety.
Attention: Notes that show how to avoid damage to the appliance.

Useful tips and hints

Environmental information

Contents

Operating Instructions 5

Safety 5

Disposal 7

Environmental tips 8

Description of machine 9

Operating screen 9

Overview of programmes 10

Before the first drying cycle 12

Sorting and preparing laundry 12

Drying 13
Switching machine on / switching light on 13
Opening loading door / filling laundry 13
Selecting the programme 13
Selecting additional functions 13
INTENSITY 13
AUDIBLE SIGNAL 14
SPECIAL CARE 14
SENSITIVE 14
Setting time delay 14
Starting the programme 15
Changing programme 15
Putting in extra items or taking items out before end of programme 15
Drying cycle complete / removing laundry 15

Cleaning and maintenance 16
Cleaning fluff filter 16
Cleaning the door seal 17
Emptying the water reservoir 18
Cleaning heat exchanger 18
Cleaning the drum 20
Clean operating screen and housing 20

What to do if 20
Troubleshooting by yourself 20
Changing bulb for inside light 22

Programming options 23

Technical data ... 24
Consumption values ... 24
Installation and connection instructions ... 25
Installation safety instructions ... 25
Removing transport safety equipment ... 25
Electrical connection ... 26
Changing door stop ... 26
Special accessories ... 28
Guarantee/Customer Service ... 29
Service ... 31

⚠ Safety

Before first starting up

- Note the **"Installation and connection instructions"**
- Before first starting up, check the machine for any damage incurred during transport. Never connect up a damaged machine. If parts are damaged, contact your supplier.

Intended use

- The dryer is intended for drying standard laundry in domestic applications.
- Conversions or modifications to the dryer are not permitted.
- This dryer is intended only for drying textile material washed in water.
- To minimize the risk of fire in a tumble dryer, the following should be observed:
  - Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.
  - Oil-affected items can ignite sponteanously, especially when exposed to heat sources such as a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
  - If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contamined by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard. The „cool down" cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.
  - Items that have been previously cleaned in, washed in, soaked or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer.
  - Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol / gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers should not be placed in a tumble dryer.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber-like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.
- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies´waterproof napkin covers should not be placed in a tumble dryer.
- rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.

- When using dry-cleaning sets: Only use those products which are declared as suitable for the dryer by the manufacturer.
- Do not place heavily worn laundry items in the dryer. Risk of fire!
- Do not place laundry items with loose fillings (e.g. cushions) in the dryer. Risk of fire!
- Parts with rigid components (e.g. door mats) may cover the air slots. Risk of fire! Do not place such items in the dryer.
- Do not overfill the dryer. Risk of fire! Observe max. loading volume of 6 kg.
- Clean the micro-fine filter and fine strainer after each drying cycle.
- Never operate the dryer without fluff filters or with damaged or blocked fluff filters. Risk of fire!
- Clean the heat exchanger regularly.
- With stacked washer and dryer: Do not place objects on the dryer. These may fall off during operation.
- The covering bonnet of the bulb for the drum light must be screwed down tightly.

Safety of children and infirm persons

- The appliance is not intended for use by young children or infirm persons without supervision.
- Children are often not aware of the dangers involved when handling electrical equipment. Therefore provide the necessary supervision of children when operating the appliance and do not let children play

with the dryer – there is a danger that children could become trapped inside the appliance.

- Packaging parts (e.g. films, styropore) can be dangerous for children. Danger of suffocation! Keep packaging parts out of reach of children.
- Make sure that children or small animals do not climb into the drum of the dryer. For this purpose keep the door of the dryer closed when the appliance is not in use.

General safety

- Only specialists may undertake repairs on the dryer.
- Never start up the dryer if the mains cable is damaged or if the operating screen, operating plate or base area are damaged so that the inside of the machine is open and accessible.
- Switch off the dryer before all cleaning, care or maintenance work. Also disconnect the mains plug from the socket or – with permanent connections – switch off the LS switch in the fuse box and/or fully unscrew the screwed-in fuse.
- Disconnect the machine from the power supply during long pauses in operations.
- When removing from the socket, never pull the mains plug by the cable, instead take a hold of the plug.
- Manifold plugs, couplings and extension cables must not be used. Risk of fire from overheating!
- Do not spray down the dryer with jets of water. Risk of electric shock!
- Do not lean on the open door. The machine may tip over.
- Once the drying cycle has been interrupted, the laundry and drum may be hot. Risk of burns! Take care when removing the laundry.

Disposal

Packaging material
The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.

Old appliance

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Warning! Remove mains plug from socket when you have no further use for the machine. Cut off mains cable and dispose of together with plug.
Destroy loading door lock. Children cannot then lock themselves in the machine and put their lives at risk.

Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
  – always keep the ventilation slots on the base of the dryer unobstructed;
  – use the loading volumes specified in the programme overview;
  – ensure you have good ventilation in the installation room;
  – clean the micro-fine filter and fine strainer after each drying cycle;
  – spin the laundry well before drying. Example: Consumption data – depending on spinning speed – for 6 kg of laundry, dried using the COTTONS STORAGE DRY programme.

Pre-draining			Drying cycle
Revolutions per minute	Residual dampness		Energy in kWh
	in litres	as a %	
800	4.2	70	3,84
1000	3.6	60	3,36
1200	3.2	53	3,10
1400	3.0	50	3,00
1800	2.5	42	2,60

Description of machine

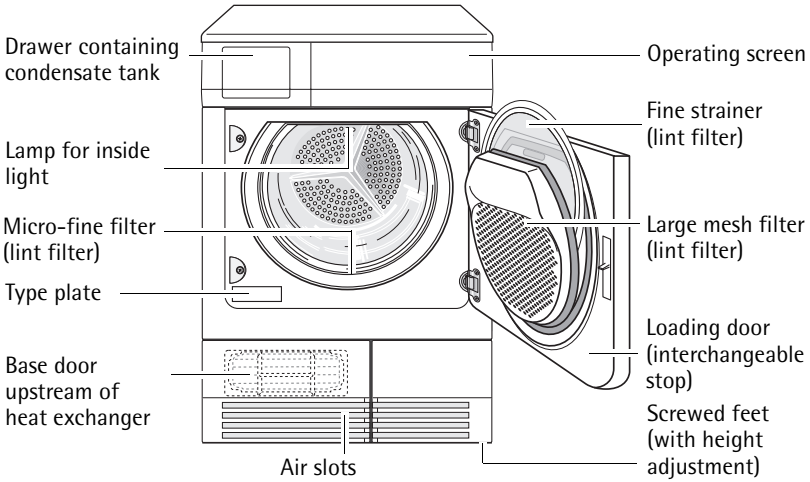

Operating screen

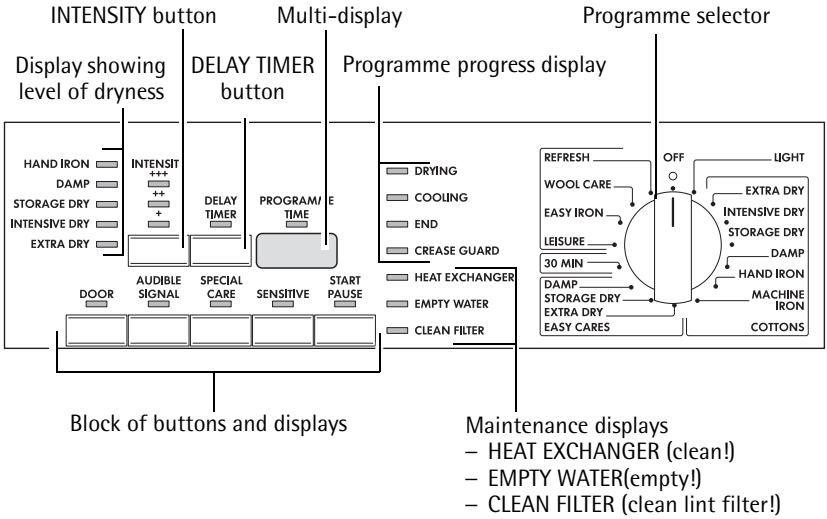

Overview of programmes

Programme		max. loading volume (weight when dry)	Additional functions				Application/properties	Care symbols
			AUDIBLE SIGNAL	SPECIAL CARE[1]	SENSITIVE [1]	INTENSITY		
COTTONS	EXTRA DRY	6kg	•	•	•	•	Drying thick or multi-layered textiles, e.g. terry towelling items	
	INTENSIVE DRY	6kg	•	•	•	•	Drying thick textiles, e.g. terry towelling items, towels.	
	STORAGE DRY	6kg	•	•	•	•	Drying textiles of even thicknesses, e.g. terry towelling items, knitted items, towels.	
	DAMP	6kg	•	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	
	HAND IRON	6kg	•	•	•	•	For normal thickness cotton or linen laundry, e.g. bedding, table linen.	
	MACHINE IRON	6kg	•	•	•	•	For cotton or linen laundry which are still to be put through a machine, e.g. bedding, table linen.	
EASY CARES	EXTRA DRY	3kg	•	•	•	•	Drying thick or multi-layered textiles, e.g. pullovers, bedding, table linen.	[2]
	STORAGE DRY	3kg	•	•	•	•	For thin textiles which are not ironed, e.g. easy care shirts, table linen, baby's clothes, socks, underwear.	[2]
	DAMP	3kg	•	•	•	•	For thin textiles which are still to be ironed, e.g. knitted items, cotton shirts.	[2]

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.
2) Press the SPECIAL CARE button!

Programme	max. loading volume (weight when dry)	Additional functions				Application/properties	Care symbols
		AUDIBLE SIGNAL	SPECIAL CARE[1]	SENSITIVE[1]	INTENSITY		
30 MIN	1 kg	•	•	-	-	For drying individual items of laundry or for small volumes of less than 1 kg.	[2]
LEISURE	6 kg	•	•	•	•	Special programme for leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the cuffs and seams).	
EASY IRON	1 kg	•	•	-	-	Special programme with anti-crease feature for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.	[2]
WOOL CARE	1 kg	•	•	-	-	Special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods. Wool fibres are aligned and the wool becomes soft and snugly. Recommendation: Remove textiles immediately after drying.	
REFRESH	1 kg	•	•	-	-	Special programme, lasting around 35 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the drier by the manufacturer; please observe the manufacturer's instructions for use.)	

1) SPECIAL CARE and SENSITIVE cannot both be selected at the same time.
2) Press the SPECIAL CARE button!

Before the first drying cycle

In order to remove any residue which may have been produced during production, wipe the dryer drum with a damp cloth or undertake a brief drying cycle (30 MIN) with damp cloths.

Sorting and preparing laundry

Sorting laundry

- Sort by fabric type:
  – Cotton/linen for programmes in COTTONS programme group.
  – Mixtures and synthetics for programmes in EASY CARES programme group.
- Sorting by care label. The care labels mean:

Basic drying in tumble dryer possible	Drying at normal temperature	Drying at reduced temperature (press SPECIAL CARE button!)	Drying in tumble dryer **not** possible

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry tricot or knitted items with the EXTRA DRY programme. Items may become stuck!
- Do not dry wool in the dryer. May become entangled! After air-drying, wool may be dried with the WOOL CARE programme.

Preparing laundry

- To avoid laundry becoming tangled: Close zips, button up coverings and tie loose bands or ribbons (e.g. of aprons).
- Empty pockets. Remove metallic items (paperclips, safety pins etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

Drying

Switching machine on / switching light on

Turn the programme selector to any programme or turn it to LIGHT. The machine has been switched on. When the loading door is opened, the drum is illuminated.

Opening loading door / filling laundry

1. Open loading door:
   – Either use force to push against the loading door (push point)
   – or if the machine is switched on: Press the DOOR button.
2. Load your laundry (do not force it in).

Caution! Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

Selecting the programme

Use the programme selector to set the programme you require.
The probable programme run time is displayed (in minutes) on the multi-display.

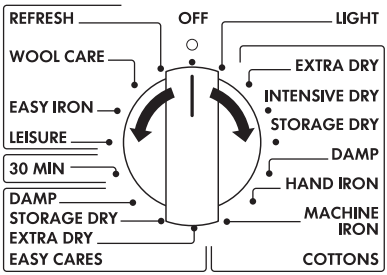

Selecting additional functions

INTENSITY

Precise setting of humidity content of laundry. Laundry becomes dryer from + to +++.

1. Press the INTENSITY button as many times as necessary until the small light at the level of residual dampness required is illuminated.

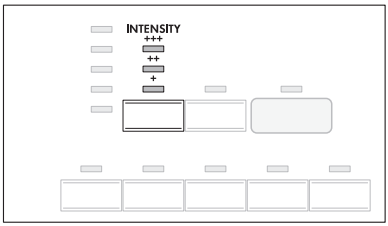

If required, press the AUDIBLE SIGNAL, SPECIAL CARE or SENSITIVE buttons.

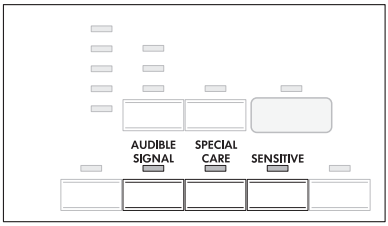

AUDIBLE SIGNAL

When the drying cycle has finished, an intermittent audible signal will sound.

SPECIAL CARE

For especially gentle drying of sensitive fabrics with the ⊙ care label and for temperature-sensitive textiles (e.g. acrylic, viscose). Programme is executed with reduced heat.
SPECIAL CARE is only suitable for use with loads of up to 3 kg!

SENSITIVE

For gentle drying of frequently-worn textiles. Programme starts on full heat setting, which is then reduced towards the end of the programme to ensure gentle care of laundry.

SPECIAL CARE and SENSITIVE cannot be selected together.

Setting time delay

With the DELAY TIMER button, you can delay the start of a programme by between 30 minutes (30') and a maximum of 23 hours (23h).

1. Select the programme
2. Press the DELAY TIMER button as many times as necessary until the required start delay appears on the multi display, e.g. 12h if the programme is to be started in 12 hours. The DELAY TIMER display is illuminated.

If 23h is displayed and you press the button again, the time delay will be cancelled. The display will show 0' and then the duration of the selected programme.

3. To activate the delay timer, press the START/PAUSE button. The amount of time remaining until the programme is set to start is continuously displayed (e.g. 12h, 11h, 10h, ... 30' etc).

Starting the programme

Press the START/PAUSE button. The programme is started.
The programme progress display and the display showing the level of dryness show drying progress.

Changing programme

To change a programme which has been selected by mistake once the programme has started, first turn the programme selector to OFF and then reset the programme.

The programme can no longer be changed directly once the programme has started. If nevertheless there is an attempt to change the programme on the programme knob, the programme progress display and the maintenance indicators flash. If an option button (excluding the AUDIBLE SIGNAL button) is pressed, *Err* appears in the multidisplay. The drying programme is not however affected by this (laundry protection).

Putting in extra items or taking items out before end of programme

1. Open door.

Warning! Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close door securely.
4. Press the START/PAUSE button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying cycle is complete, the END and CREASE GUARD displays light up. If the AUDIBLE SIGNAL button has been pressed, an audible signal sounds intermittently.

The drying cycle is automatically followed by a crease guard phase which lasts around 30 minutes. The drum rotates in intervals during this phase. The laundry thereby remains relaxed and free of creases. The laundry can be removed at any time during the crease guard phase. (The laundry should be taken out towards the end of the crease guard phase at the latest to prevent creases from forming.)

1. Open loading door
2. Before removing the laundry, remove lint from the micro-fine filter. It is best to use a damp hand for this purpose (refer to "Cleaning and maintenance" section).
3. Remove laundry.
4. Turn the programme selector to OFF.

   Important! After each drying cycle
   – clean the micro-fine filter and fine strainer,
   – drain the condensate tank
   (refer to the "Cleaning and maintenance" section).
5. Close loading door.

Cleaning and maintenance

Cleaning fluff filter

To ensure that the dryer works perfectly, the fluff filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.

⚠ **Caution!** Never operate the dryer without fluff filters or with damaged or blocked fluff filters.

1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

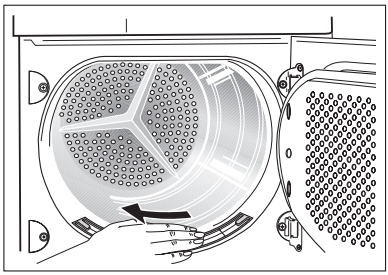

3. Push down unlock button on large mesh filter.
   Large mesh filter jumps up.

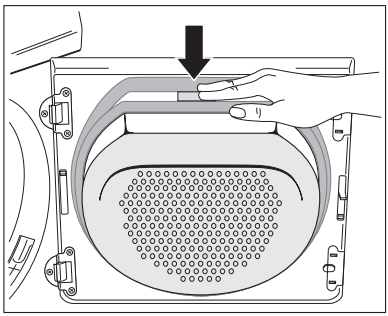

4. Take out fine strainer.
5. Remove fluff from fine strainer. It is best to use a damp hand for this purpose.

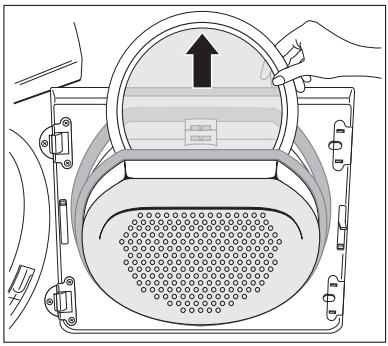

Clean the entire filter area

The strainer area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of fluff if necessary.

6. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.
7. Remove fluff from the entire filter area. It is best to use a vacuum cleaner for this purpose.
8. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
9. Re-insert fine strainer.
10. Press against the large mesh filter until it locks into the interlock.

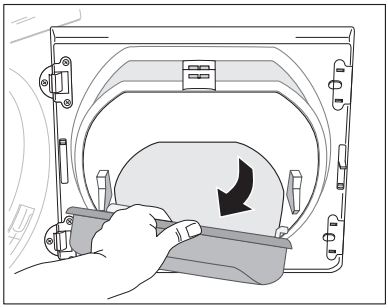

If the fine strainer is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

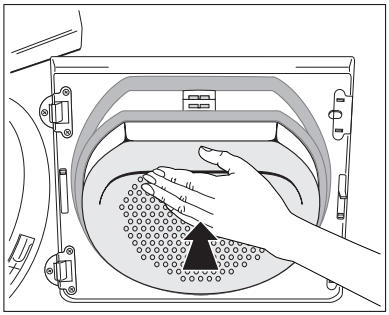

Cleaning the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.

Emptying the water reservoir

Empty water reservoir after every drying cycle.

If the water reservoir is full, an active programme will be interrupted automatically and the EMPTY WATER display will light up. In order to continue the programme, the water reservoir must be emptied.

⚠ **Warning!** The condensed water is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer containing water reservoir completely (1) and pull up the water reservoir's drainage pipe as far as it will go (2).

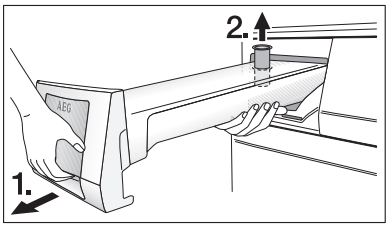

2. Pour condensed water out into a sink or other suitable container.
3. Slide outlet connections in and refit water reservoir.

   If the programme has been interrupted as a result of the water reservoir being full:
   Press the START/PAUSE button to continue the drying cycle.

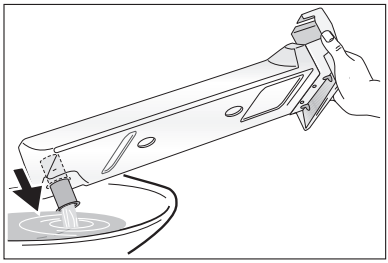

ℹ The water reservoir has a volume of approx. 4 litres. This is sufficient for around 6kg of laundry which has previously been spun at 800 revolutions/minute.

ℹ The condensed water can be used as distilled water, e.g. for steam ironing. However first filter it (e.g. with a coffee filter) to remove any residue and small pieces of fluff.

Cleaning heat exchanger

If the HEAT EXCHANGER display is illuminated, the heat exchanger needs to be cleaned.

⚠ **Caution!** Operating when the heat exchanger is clogged with lint can damage the dryer. This also increases energy consumption.

1. Open loading door
2. Open base door. To do this, press the release button located beneath the loading aperture and open the base door to the left.
3. Remove lint from the inside of the door and the heat exchange chamber. Wipe the door seal with a damp cloth.

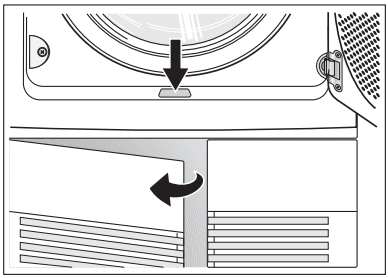

4. Turn both lock washers inwards.

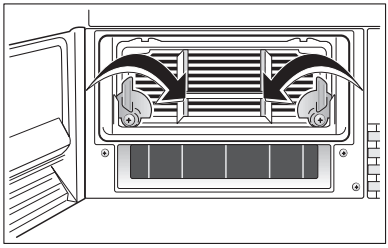

5. Use the handle to pull the heat exchanger out of the base and carry it horizontally to prevent any remaining water from spilling.
6. To empty the heat exchanger, hold vertically over a washing-up bowl.

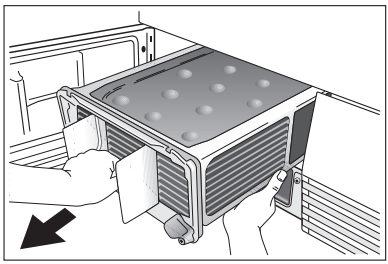

⚠ **Caution!** Do not use sharp objects to clean the heat exchanger. You could damage it an cause leaks.

7. Clean heat exchanger.
   It is best to use a brush or to rinse thoroughly with a shower head.
8. Replace heat exchanger and lock into place (turn both lock washers outwards until they snap into place).
9. Close base door.

ℹ The dryer will not operate if the HEAT EXCHANGER indicator is still lit.

⚠ **Caution!** Never operate the dryer without the heat exchanger.

Cleaning the drum

Caution! Do not use abrasives or steel wool to clean the drum.

Lime in the water or cleaning agents may form a barely visible lining on the inside of the drum. The degree to which the laundry has been dried is then no longer detected reliably. The laundry is damper than expected when removed from the dryer.

Use a standard domestic cleaner (e.g. vinegar-based cleaner) to wipe down the inside of the drum and drum ribs.

Clean operating screen and housing

Caution! Do not use furniture cleaners or aggressive cleaning agents to clean the machine.

Use a damp cloth to wipe down the operating screen and housing.

What to do if ...

Troubleshooting by yourself

If, during operation, the error code (E plus number or letter) appears on the multi-display: Switch the machine off and on again. Reset programme. Press the START/PAUSE button
If the error is still displayed, please inform your local Service Force Centre and quote the error code.

Problem	Possible cause	Remedy
Dryer does not work.	Mains plug is not plugged in or fuse is not working correctly.	Plug in at mains socket. Check fuse in fuse box (domestic installation).
	Loading door is open.	Close loading door.
	Have you pressed the START/PAUSE button?	Press the START/PAUSE button again.

Problem	Possible cause	Remedy
Drying results unsatisfactory.	Wrong programme selected.	Select a different programme the next time you dry (see "Overview of programmes" section).
	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	Overloading of laundry.	Observe recommended loading volumes.
	Ventilation slots in base area covered up.	Uncover ventilation slots in base area.
	Residue on inside surface of drum or drum ribs.	Clean inside surface of drum and drum ribs.
		Make an adjustment using the INTENSITY function (see chapter "Drying, Selecting additional functions").
Loading door does not open with DOOR button.	Mains plug disconnected.	Plug in at mains socket.
	Programme selector in OFF position.	Set programme. Loading door can be opened at any time by exerting pressure on the door.
Loading door does not close.	Fine strainer not in place and/or large mesh filter not locked in place.	Install fine strainer and/or snap large mesh filter into place.
When a button is pressed, Err appears in the multi-display.	Washing protection. After the start of the programme, the option can no longer be set.	Turn the programme knob to OFF. Set the programme again.
Drum light does not work.	Programme selector in OFF position.	Turn programme selector to LIGHT or to any programme.
	Defective light bulb.	Replace light bulb (see next section).
PROGRAMME TIME display changes erratically or stays unchanged for a long time.	Programme time is corrected automatically depending on type and volume of laundry and level of dampness.	Automatic process; this is not a machine fault.
Programme inactive, EMPTY WATER display illuminated.	Condensate tank is full.	Empty condensate tank, then start programme with START/PAUSE button.

Problem	Possible cause	Remedy
Drying cycle ends shortly after programme starts. END display illuminated.	Not enough washing loaded or washing loaded is too dry for selected programme.	Select time programme or higher drying level (e.g. INTENSIVE DRY instead of STORAGE DRY).
Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete").	Lint filter clogged.	Clean lint filter.
	Heat exchanger clogged with lint.	Clean heat exchanger.
	SPECIAL CARE button pressed and load volume too big.	SPECIAL CARE is only suitable for use with loads of up to 3 kg!
	Load volume too big.	Reduce load volume.
	Laundry insufficiently spun.	Laundry must be adequately spun.

Changing bulb for inside light

Only use a special bulb which is designed specially for dryers. The special bulb is available from the after-sales service,
ET-Nr. 112 552 000-5.

Warning! Do not use standard bulbs! These develop too much heat and may damage the machine!

Warning! Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew covering bonnet from above bulb (this can be found directly behind the loading aperture, at the top; refer to "Description of machine" section.)
2. Replace defective bulb.
3. Screw covering bonnet back down.

Warning! For reasons associated with safety, the covering bonnet must be screwed down tightly. If this is not done, the dryer must not be operated.

Programming options

Objective	Implementation
Permanently programme in the audible signal which reminds you that the programme is complete.	**1.** Turn the programme selector to any programme. **2.** Press the AUDIBLE SIGNAL button and hold down for approx. 5 seconds. A brief signal sounds several times. The AUDIBLE SIGNAL display flashes several times. The setting is permanently programmed. The setting is cancelled as described under 1 and 2.
Adjust "level of dryness" detection: If the laundry is slightly drier or slightly damper at the end of the programme than with the standard setting.	**1.** Turn the programme selector to any programme. **2.** Press the AUDIBLE SIGNAL and SENSITIVE buttons at the same time and hold down for approx. 5 seconds. The current setting appears on the multi-display: – C0: Setting for drier laundry – C1: Standard setting – C2: Setting for damper laundry **3.** Press the START/PAUSE button until the setting required appears on the multi-display. **4.** Turn the programme selector to OFF. The setting is permanently programmed.
To deactivate the EMPTY WATER display when using an external drain for the condensed water.	**1.** Turn the programme selector to any programme. **2.** Press the DOOR and SPECIAL CARE buttons at the same time and hold down for approx. 5 seconds. The multi-display briefly displays "0" The EMPTY WATER display is permanently deactivated. The setting is cancelled as described under 1 and 2; the multi-display however briefly displays " 1" (rather than "0").

Technical data

CE This appliance conforms with the following EU Directives:
– 73/23/EEC dated 19.02.1973 Low Voltage Directive
– 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
– 93/68/EEC dated 22.07.1993 CE Marking Directive

Height x width x depth	85 x 60 x 60 cm
Depth with loading door open	109 cm
Height can be adjusted by	1.5 cm
Weight when empty	approx. 42 kg
Loading volume (depends on programme) [1]	max. 6 kg
Energy consumption in accordance with IEC 1121 s. e. (6 kg of cotton, pre-drained at 1000 rpm, COTTONS STORAGE DRY programme)	3,36 kWh
Use	Domestic
permissible ambient temperature	+ 5°C to + 35°C

1) Different loading volume data may be needed in some countries as a result of different measuring methods.

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

Programme	Loading volume in kg	Energy consumption in kWh
COTTONS STORAGE DRY [1]	6	3,36
COTTONS HAND IRON [1]	6	2,70
EASY CARES STORAGE DRY [2]	3	1,20

1) pre-drained at 1000 rpm
2) pre-drained at 1200 rpm

⚠ Installation safety instructions

- Before first starting up, all parts of the transport safety equipment must be removed. The machine may otherwise be damaged.
- Before starting up for the first time, ensure that the nominal voltage and type of current specified on the machine type plate match the nominal voltage and type of current at the installation site. The electrical fuses required can also be found on the type plate.
- Always connect the plug into a protection contact socket which has been installed as specified.
- With permanent connections: A permanent connection may only be established by an authorised specialist electrician.
- Do not install machine in rooms at risk of frost.
- Ensure that the door of the machine cannot be blocked by interior doors of the house or the doors of other appliances.
- Do not install on carpets with high piles. Air circulation will be hindered at the ventilation slots.
- Ensure that the machine is not placed on its mains cable.
- Install the machine horizontally.

Removing transport safety equipment

⚠ **Caution!** Before first starting up, all parts of the transport safety equipment must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

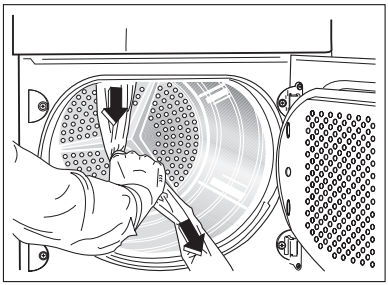

3. Remove foil hose and polystyrene padding from the machine.

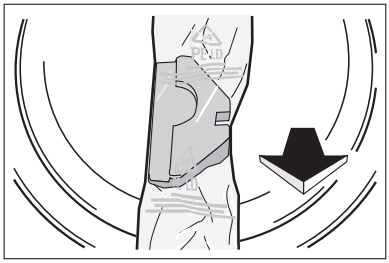

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Machine description" section).

Important:

The plug must be accessible after the appliance has been installed.

Changing door stop

Warning! The door stop may only be changed by a specialist.
If necessary, please contact our after-sales service or your specialist dealer.

Warning! Before changing the door stop, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

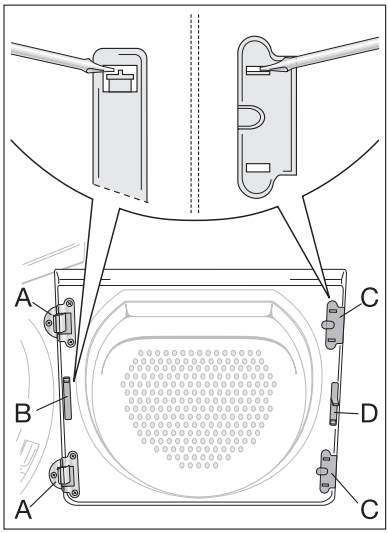

1. Open loading door.
2. Unscrew hinge A from the front of the machine and take off the loading door.
3. Remove cover plates B and C. To do this, insert a thin screwdriver into the slots as shown in the illustration, press downwards slightly and pry out the cover plates.
4. Use an appropriate tool and exert pressure to unfasten locking block D from the snap-on fixture, take out and reinsert on the other side having rotated the block through 180°.
5. Unscrew hinge A from the loading door, rotate through 180°, reinsert on the opposite side and screw down.
6. Reinsert cover plates B and C on the opposite site having first rotated them through 180°.

7. Unscrew cover plates E from the front of the machine, rotate through 180°, screw on the opposite side.
8. Unscrew door lock F, push down slightly and remove from the front of the machine.
9. Disconnect cable connector from door lock F.
10. Press snap-in button G in and down, press cover down slightly and remove from front of the machine.
11. Disconnect cable connector from cover G.
12. Change door lock F over to the opposite side, insert the cable connector and screw down the door interlock.

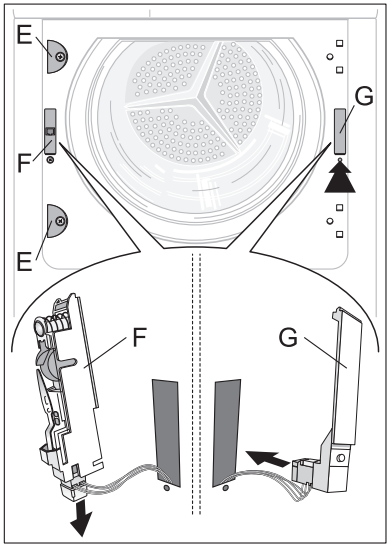

13. On the other side, insert the cable connector in cover G, insert cover and allow snap-in button to lock into place.
14. Insert loading door and hinges into recesses on the front of the machine and screw down.
15. Once the door stop has been replaced, check the function of the DOOR button.

Note regarding contact protection: The machine is only secure for operations again once all plastic parts have been inserted.

Special accessories

The following special accessories are available from your Service Force Centre or your specialist dealer:

Intermediate installation kits for stacked washer and dryer:

These intermediate installation kits can be used to arrange the dryer and an automatic AEG-Electrolux washing machine (60cm wide, front loading) as a space-saving washer/dryer stack. The automatic washing machine is at the bottom and the dryer is at the top.
Two versions can be supplied:

– without stacker plate	916 018 902
– with extractable stacker plate	916 018 903

Installation kit for external condensate drain

Installation kit (125 122 510) for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Refer to the "Programme options" section for how to deactivate the EMPTY WATER display.
Max. displacement height: 1m from the base of the dryer; max. displacement length: 3m

Guarantee/Customer Service

Weitere Kundendienststellen im Ausland
In diesen Ländern gelten die Garantiebedingungen der örtlichen Partner. Diese können dort eingesehen werden.

Further after-sales service agencies overseas
In these countries our AEG-Electrolux agents' own guarantee conditions are applicable. Please obtain further details direct.

Autres agences étrangères assurant le service après-vente
Dans ces pays, les conditions de garantie des concessionnaires de la région sont valables. Vous pouvez les consulter sur place.

Otros puntos de Postventa en el extranjero
En estos países rigen las condiciones de nuestros representantes locales. las cuales pueden ser consultadas allí mismo.

Ulteriori uffici del servizio tecnico assistenza clienti all'estero
In questi paesi sono valide le condizioni di garanzia dei partner locali. Queste condizioni possono essere esaminante sul luogo.

Serviços de assistência técnica no estrangeiro
Nestes países são válidas as condições de garantia dos concessionários locais, podendo aí ser consultadas.

További vevöszolgálati irodák külföldön
Ezekben az országokban a mi AEG-Electrolux vevöszolgálatainknál saját jótállási feltételek alkalmazhatók. A további adatokat kérjük közvetlenül szerezzék be.

Servisne službe
Na garancijskem listu boste našli seznam pooblaščenih servisnih služb AEG-Electrolux.

U.A.E. Abu Dhabi Universal Trading Company P.O. Box 43 99 Tel.: 6335331 Service Center 6733974	**Jordan** Jordan Household Supply Co. Ltd. P.O. Box 3/68 Amman/Tel.: 69 70 50	**Malta** ITC International Trading Company White House Building Mountbatte Street Blata L-Bajda/Tel.: 220644
Egypt Middle East Commercial Center 4 Salah El Dein St. - 2nd floor Heliopolis, Kairo Egypt Tel.: 2024181719	**Canada** EURO-LINE Appliances 2150 Winston PARK Drive 20 Oakville, Ontario L6H 5V1 Tel.: 905 829 3980 Fax: 905 829 3985	**Mauritius** Happy World Centre Ltd. P.O. 7 54 1 Chausee Street Port Louis Tel.: 25355
Australia The Andi-Co Group 1 Stamford Road Oakleigh VIC 3166 Tel.: (03) 9569 1255 Fax: (03) 9569 1450 www.andico.com.au	**Korea (South)** Core Incorp. 3/F Chewoo Bldg. 200 Nonhyun-Dong Kangnam-Ku 135-010 Seoul Telefon 82 2 549 89 61	**Namibia** AEG NAMIBIA (PTY) LIMITED-Jeppe Street Northern Industrial Area Windhoek Tel.: (061) 21-6082/4 Fax: (061) 217838

Bahrain/Arabian Gulf
A.A. Zayani & Sons
P.O. Box 9 32
Bahrain
Tel.: 17311124

Croatia
Electrolux D.O.O.
Suplova 7
10000 Zagreb
Tel.: 1 61 19512
Fax: 1 61 19513

New Zealand
Monaco Corporation Ltd.
10 Rothwell Avenue
Albany - Auckland
4399 Auckland 1
New Zealand
Tel.: 00 64-92 59 11 11
Fax: 00 64-92 59 11 12

Bulgaria
Electrolux Bulgaria E.O.O.D.
91 Levski Blvd.
1000 Sofia
Tel.: 2 806676
Fax. 2 980 5276

Kuwait/Arabian Gulf
Ali Al-Ghanim Est.
P.O. Box 21540 - Safat
Tel.: 4822190
Fax: 4820116

Syria
WATTAR CO.
P.O. Box 36109
Mazzeh - Damascus
Direct Phone: 00963116132649
Fax: 00963116119537

Cyprus
Hadjikyrlakos & Sons Ltd.
Prodromou 121
P.O. Box 21587
Nicosia 1511
Service Telephones:
Nicosia 02 481226
Limassol 05 562182
Larnaca 04 633929
Paphos 06 932 699

Lebanon
Adib & Assaferi
P.O. Box 539
Tripoli

Iran
ARIAN International Development Co.
AEG Showroom
Shariati, Balatar as Safar
Teheran / Iran
Phone No. Showroom:
021 / 285 513 / 4
Phone No. Service:
021 / 312 27 67 / 8

Estonia
Electrolux Estonia Ltd.
Mustamäe tee 24
EE0006 Tallinn
Tel.: (372) 6 650 090
Fax: (372) 6 650 092

Latvia
Electrolux Latvija Ltd.
Kr.Barona iela 130/2
Riga, LV-1012
Tel.: 371 7313626
Fax: 371 7845954

Poland
Electrolux Poland Sp. zo.o.
ul. Domaniewska 41
02-034 Warszawa
tel.: 022 874 33 33
fax: 022 874 33 00

Hong Kong
Dah Chong Hong Ltd.
20 Kai Cheung Road
Kowloon Bay
Kowloon - Hong Kong
Tel.: 0085222621620
Fax: 0085227550333

Lithuania
Electrolux Lithuania
Verkui 29
2600 Vilnus
Tel.: 372 272 3326
Fax: 372 272 3366

Russia
Electrolux Russia Ltd.
16 Olympiysky prospekt
129090 Moscow
Tel.: (095) 937 7837
Fax: (095) 926 5513

Israel
Evis Ltd.
Tadiran-Ampa Service
10 Gibonay Israel Street
New Industrial Zone
Netanya, 42504
Israel

Malaysia
Arzbergh Engineering
No. 49A/B, Jalan Petaling
Utama 7
4600 Petaling Jaya
Tel.: 3 795 1084
Fax: 3 795 1082

Saudi Arabia
Awad Badi Nahas Est
Shara Siteen
Jeddah 21463
Phone: 6646583
Alia Trading Co
Mecca Road
Riyadh 11491
Phone 4645977

Japan
Electrolux Japan Ltd.
Domestic Appliances Department
Maruzen Showa Warehouse Building
Tookai 4-5-12, Ota-ku
143-006 Tokyo
Tel.: 0120-13-7117
Fax: 03-3790-5257

Singapore
Group Pte Ltd.
833 Bukit Timah Road
Unit no. 01-11 Royalville
279887 Singapore
Tel.: 0065 64638484
Fax: 0065 64638488

Slovenia
Electrolux Slovenia D.O.O.
Traska Ul. 132
1000 Ljubljana
Tel.: 61 1234 137
Fax: 61 1234 238

Thailand Olympia Thai Tower, 444 Rachadapiser Road Samsennok- Huaykwang 10320 Bangkok Thailand Tel.: 006625136111 Fax: 006625136334	**Slovakia Rep.** Electrolux Slovakia S.R.O. Seberiniho 1 821 03 Bratislava Tel.: 02 4333 4322, 4355 Fax: 02 4333 6976	**South Africa** AEG (Pty) Ltd. 55, 12th Road P.O. Box 1 02 64 Kew/Johannesburg 2000 Tel.: 8069111
Hungary Electrolux Lehel KFT Erzsébet Királyné útja 87. 1142 Budapest Tel.: 00361/467-3200	**Czech Rep.** ELECTROLUX DOMÁCÍ SPOTŘEBIČE CZ DIVIZE ELECTROLUX S.R.O. Customer Centre Hanusova ul. 140 21 Praha 4 Tel.: 2 6112 6112 Telefax: 2 6112 3504	

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

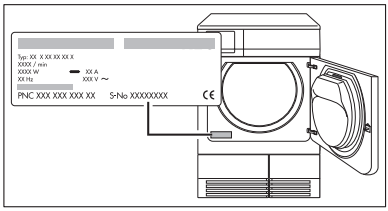

– Model description
– Product number (PNC)
– Serial number (S No.)
  (for numbers see rating plate)
– Type of fault
– Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: .....

PNC: .....

S No: .....

***From the Electrolux Group**. The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg-electrolux.de

© Copyright by AEG

822 944 843-01-250406-02

Subject to change without notice